





DO NOT REMOVE the bolt connecting the motor to the front pivot point (Heim Joints). This may alter saw calibration and affect cutting ability.

DO NOT FILL WITH OIL— Motor Kits contain the correct amount of oil. Change oil with the provided Oil Change Syringe only after 10 hours of use. See Pg. 2 for directions.

UNPLUG THE SAW before beginning work



- 1 Remove the QT™ Hub**
Remove the cover from the hub along with the flange and blade. Depress the blade lock button. Insert the adaptor into the Snake Eye Bolt and remove the QT™ Hub with a 3/4 socket.

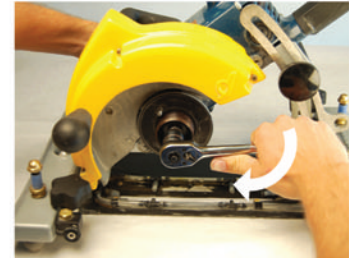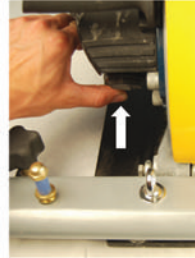



- 2 Remove Motor Mount Screws**
Remove all motor mounting screws with the provided wrenches.



- 3 Remove the old motor**



- 4 Prepare the motor kit new motor for mounting on the Saw**

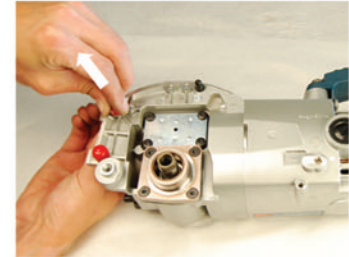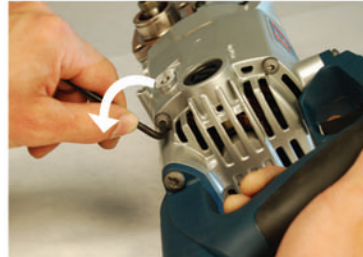

- 5 Start all screws**



- 6 Tighten all screws with provided wrenches**



- 7 Assemble upper saw handle**

- 8 Bolt on QT™ Hub and Blade. Assembly complete!**